
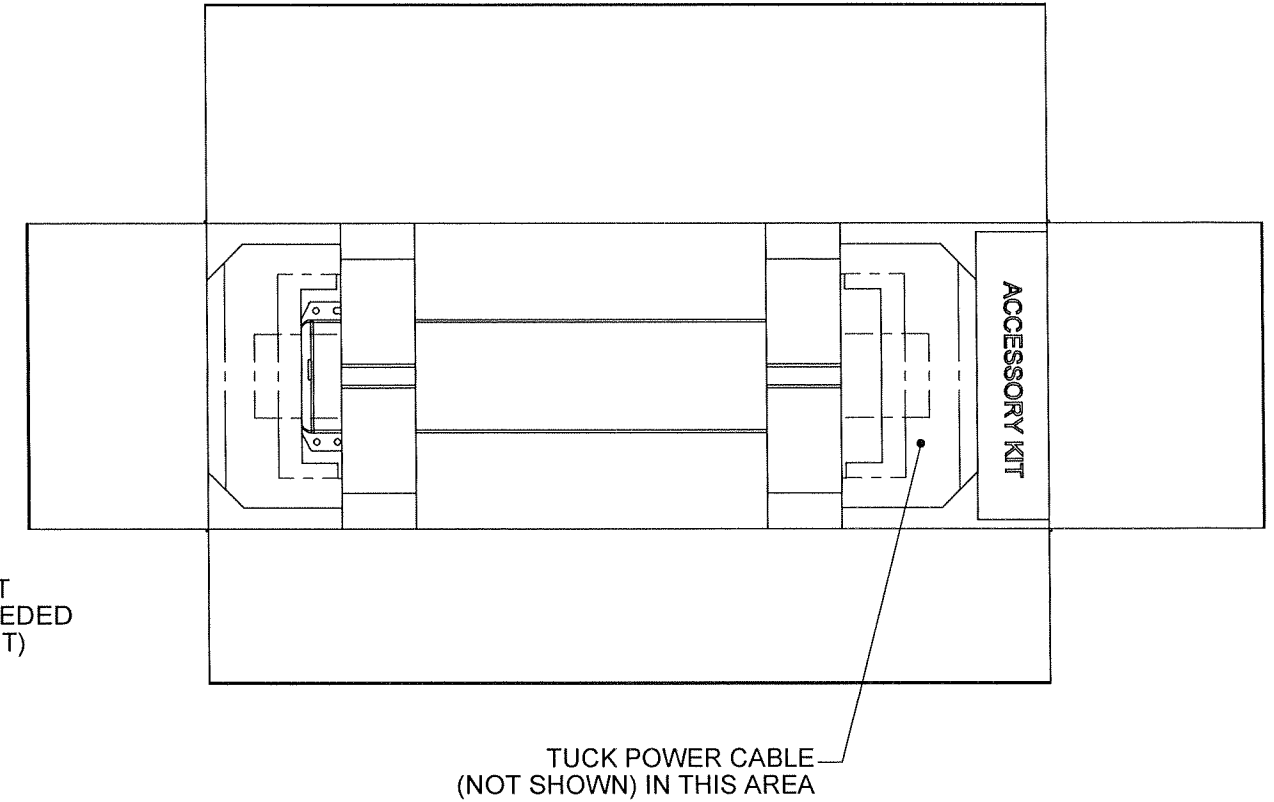


REV	ECO	DATE	DESCRIPTION	DB
A	3968	6-Nov-08	RELEASE TO PRODUCTION	DMD

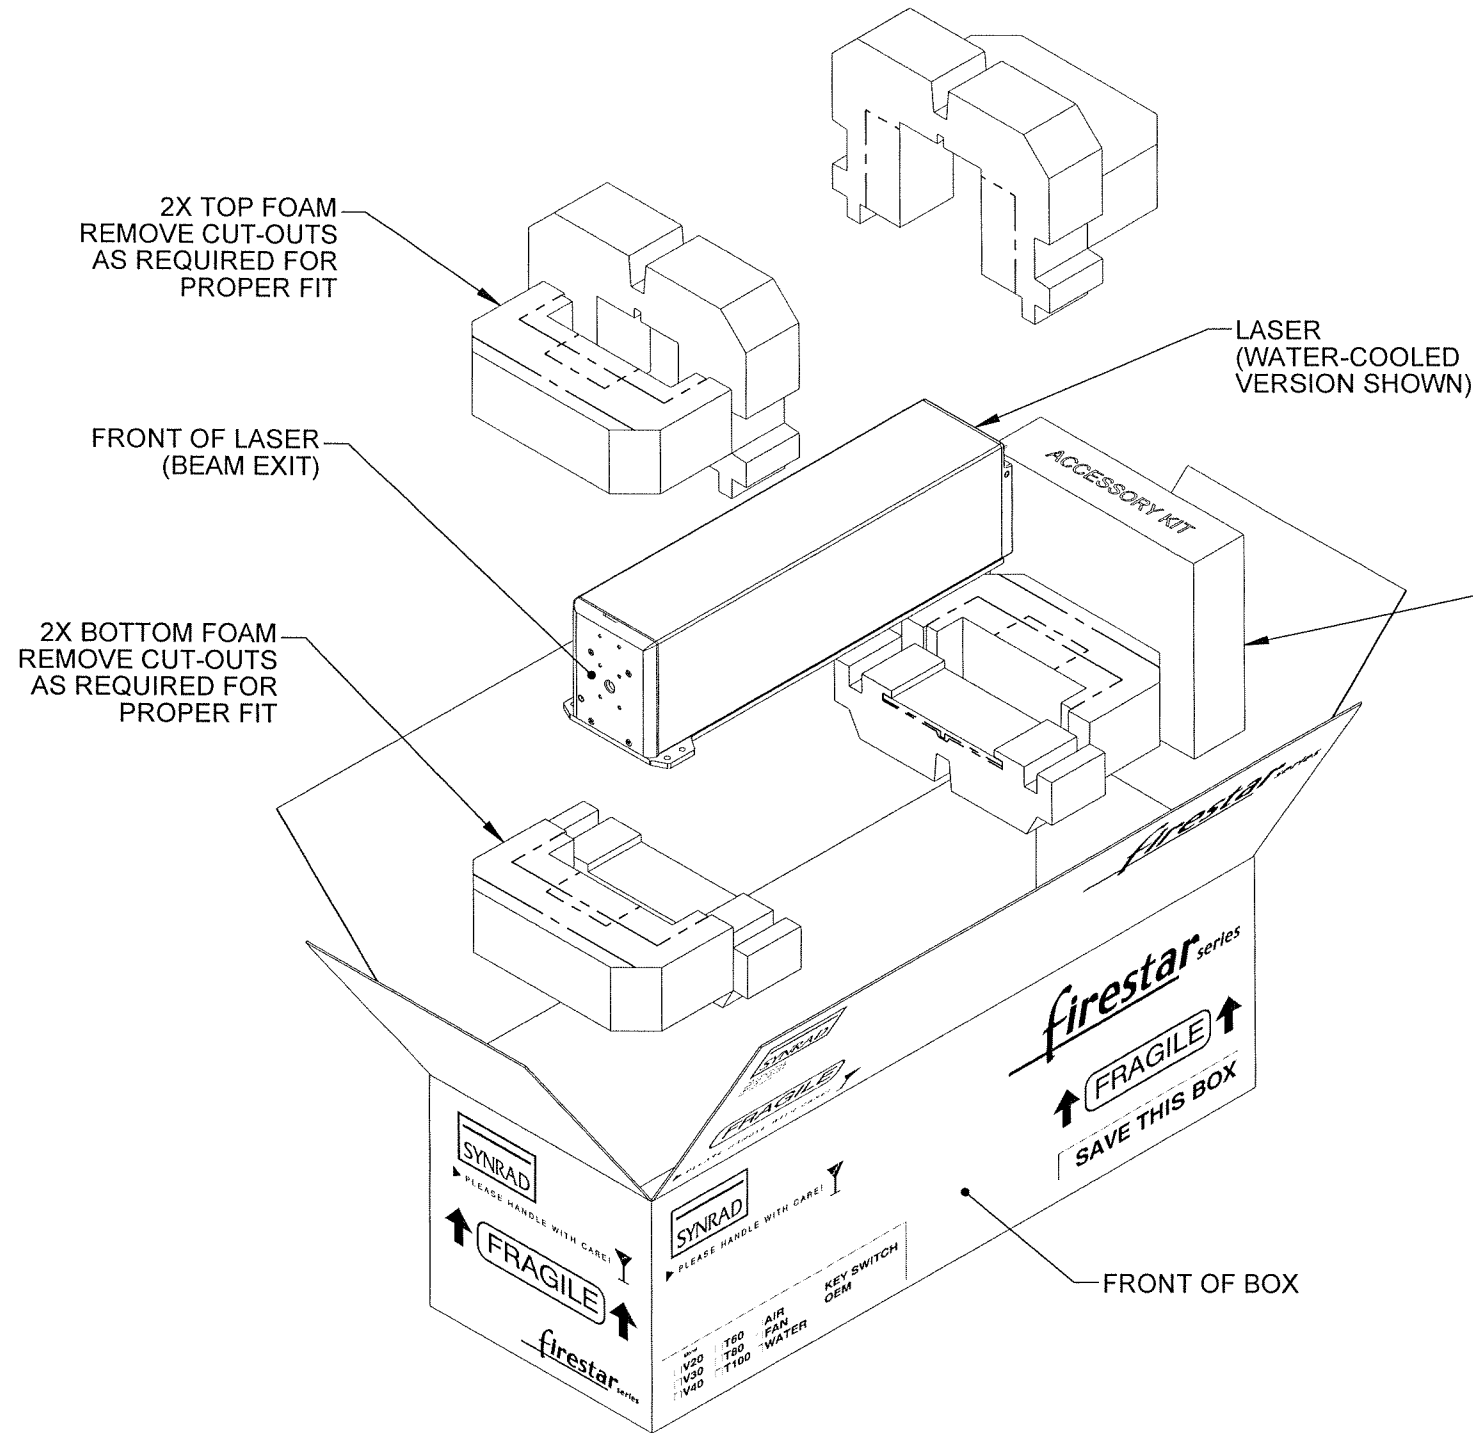

STEP BY STEP PACKAGING INSTRUCTIONS:

1. POSITION BOX SO LOGO ON TOP FLAP IS FACING YOU (LOGO WILL BE ON THE LEFT SIDE).
2. POSITION BOTTOM FOAM INSIDE BOX AS SHOWN.
3. INSERT ACCESSORY KIT BEHIND BOTTOM REAR FOAM AS SHOWN.
4. PLACE LASER INSIDE FOAM CAVITIES AS SHOWN, MAKING SURE FRONT OF LASER IS ON THE LEFT SIDE.
5. PULL CABLES TO RIGHT SIDE AND COIL. NOTE: CABLES NOT SHOWN FOR EASE OF ILLUSTRATION.
6. PLACE TOP FOAM OVER LASER AND SECURE INTO BOTTOM FOAM NOTCHES AS SHOWN.
7. TUCK CABLE AS SHOWN.
8. DO NOT SHIP WITH KEY IN SWITCH TO AVOID DAMAGE TO KEYSWITCH.
9. WRITE SYNRAD RETURN AUTHORIZATION NUMBER ON OUTSIDE OF SHIPPING BOX.

IMPORTANT NOTE: FAILURE TO PROPERLY PACKAGE LASER USING SYNRAD SHIPPING BOX AND FOAM/CARDBOARD INSERTS AS SHOWN MAY VOID WARRANTY. CUSTOMERS MAY INCUR ADDITIONAL REPAIR CHARGES DUE TO SHIPPING DAMAGE CAUSED BY IMPROPER PACKAGING.

TOLERANCES UNLESS NOTED:	
.x = ± 0.1	ANGLE = ± 0.5°
.xx = ± 0.01	
.xxx = ± 0.005	
MATERIAL: SEE BOM	
FINISH:	

PROPRIETARY
THIS DRAWING IS PROPRIETARY TO SYNRAD INC. AND SHALL NOT BE USED OR DISCLOSED IN WHOLE OR IN PART WITHOUT WRITTEN PERMISSION OF SYNRAD INC.


DESCRIPTION:
PACKAGING, T70i

PART NUMBER: 900-19879-01

SHEET 1 of 1

UNITS: Inches

SIZE: B

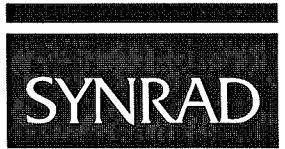	SYNRAD INC. 4600 Campus Place Mukilteo, WA 98275 Phone: (425)349-3500 Fax: (425)349-3667		
	DRAWN BY: D. DUVALL CHECKED BY: APPROVED BY: <i>[Signature]</i>	DATE: 6-Nov-08 DATE:	DWG/FILE NUMBER: 900-19879-01 DATE: 11/24/2008