
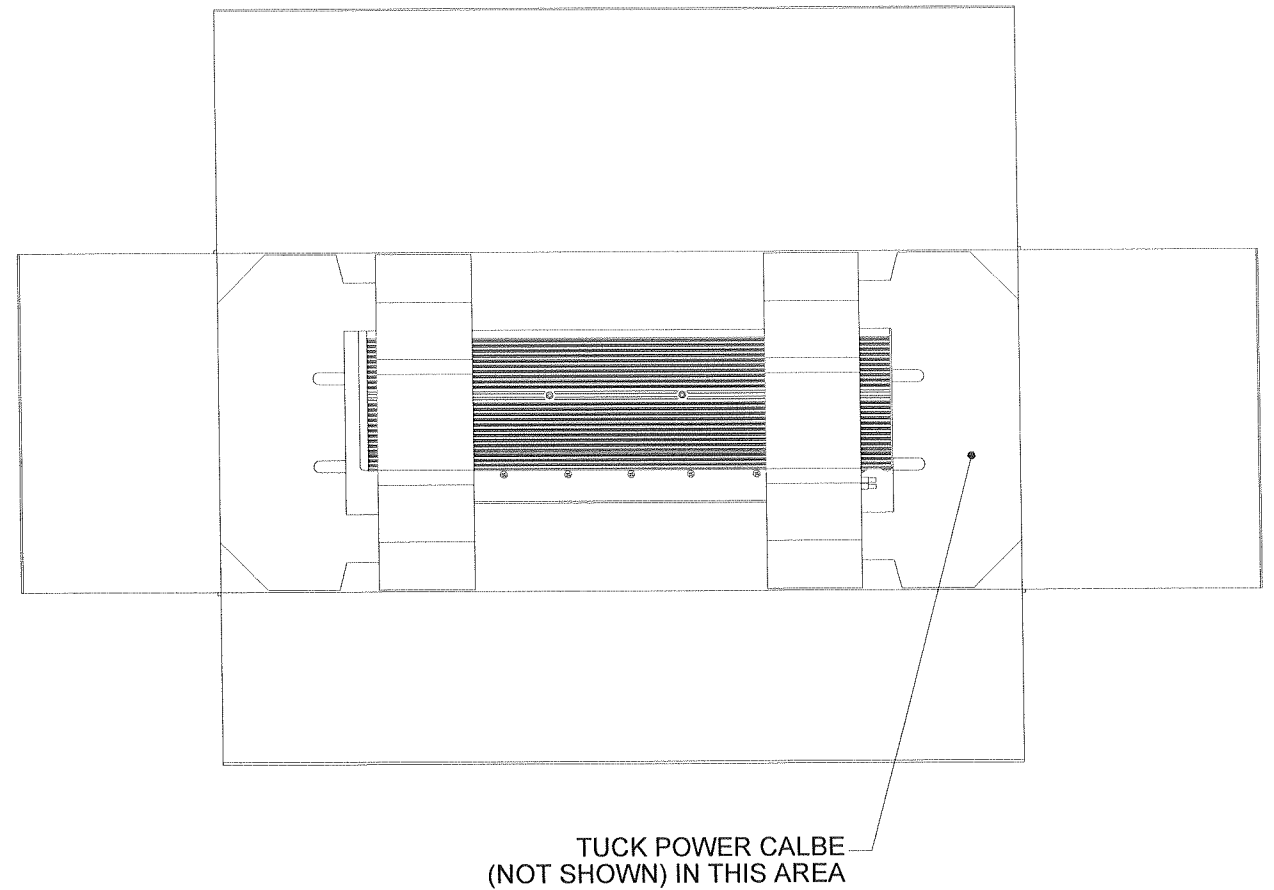


STEP BY STEP PACKAGING INSTRUCTIONS:

1. POSITION BOX SO LOGO ON TOP FLAP IS FACING YOU (LOGO WILL BE ON THE LEFT SIDE).
2. POSITION BOTTOM FOAM INSIDE BOX AS SHOWN.
3. PLACE LASER INSIDE FOAM CAVITIES AS SHOWN, MAKING SURE FRONT OF LASER IS ON THE LEFT SIDE AND TOP OF LASER IS FACING YOU.
4. PULL CABLES TO RIGHT SIDE AND COIL. NOTE: CABLES NOT SHOWN FOR EASE OF ILLUSTRATION.
5. PLACE TOP FOAM OVER LASER AS SHOWN.
6. TUCK CABLE AS SHOWN.
7. DO NOT SHIP WITH KEY IN SWITCH TO AVOID DAMAGE TO KEYSWITCH.
8. WRITE SYNRAD RETURN AUTHORIZATION NUMBER ON OUTSIDE OF SHIPPING BOX.

REV	ECO	DATE	DESCRIPTION	DB
A	4325	26-Apr-11	RELEASE TO PRODUCTION	DMD
B	4564	23-May-12	UPDATE DESCRIPTION	DMD

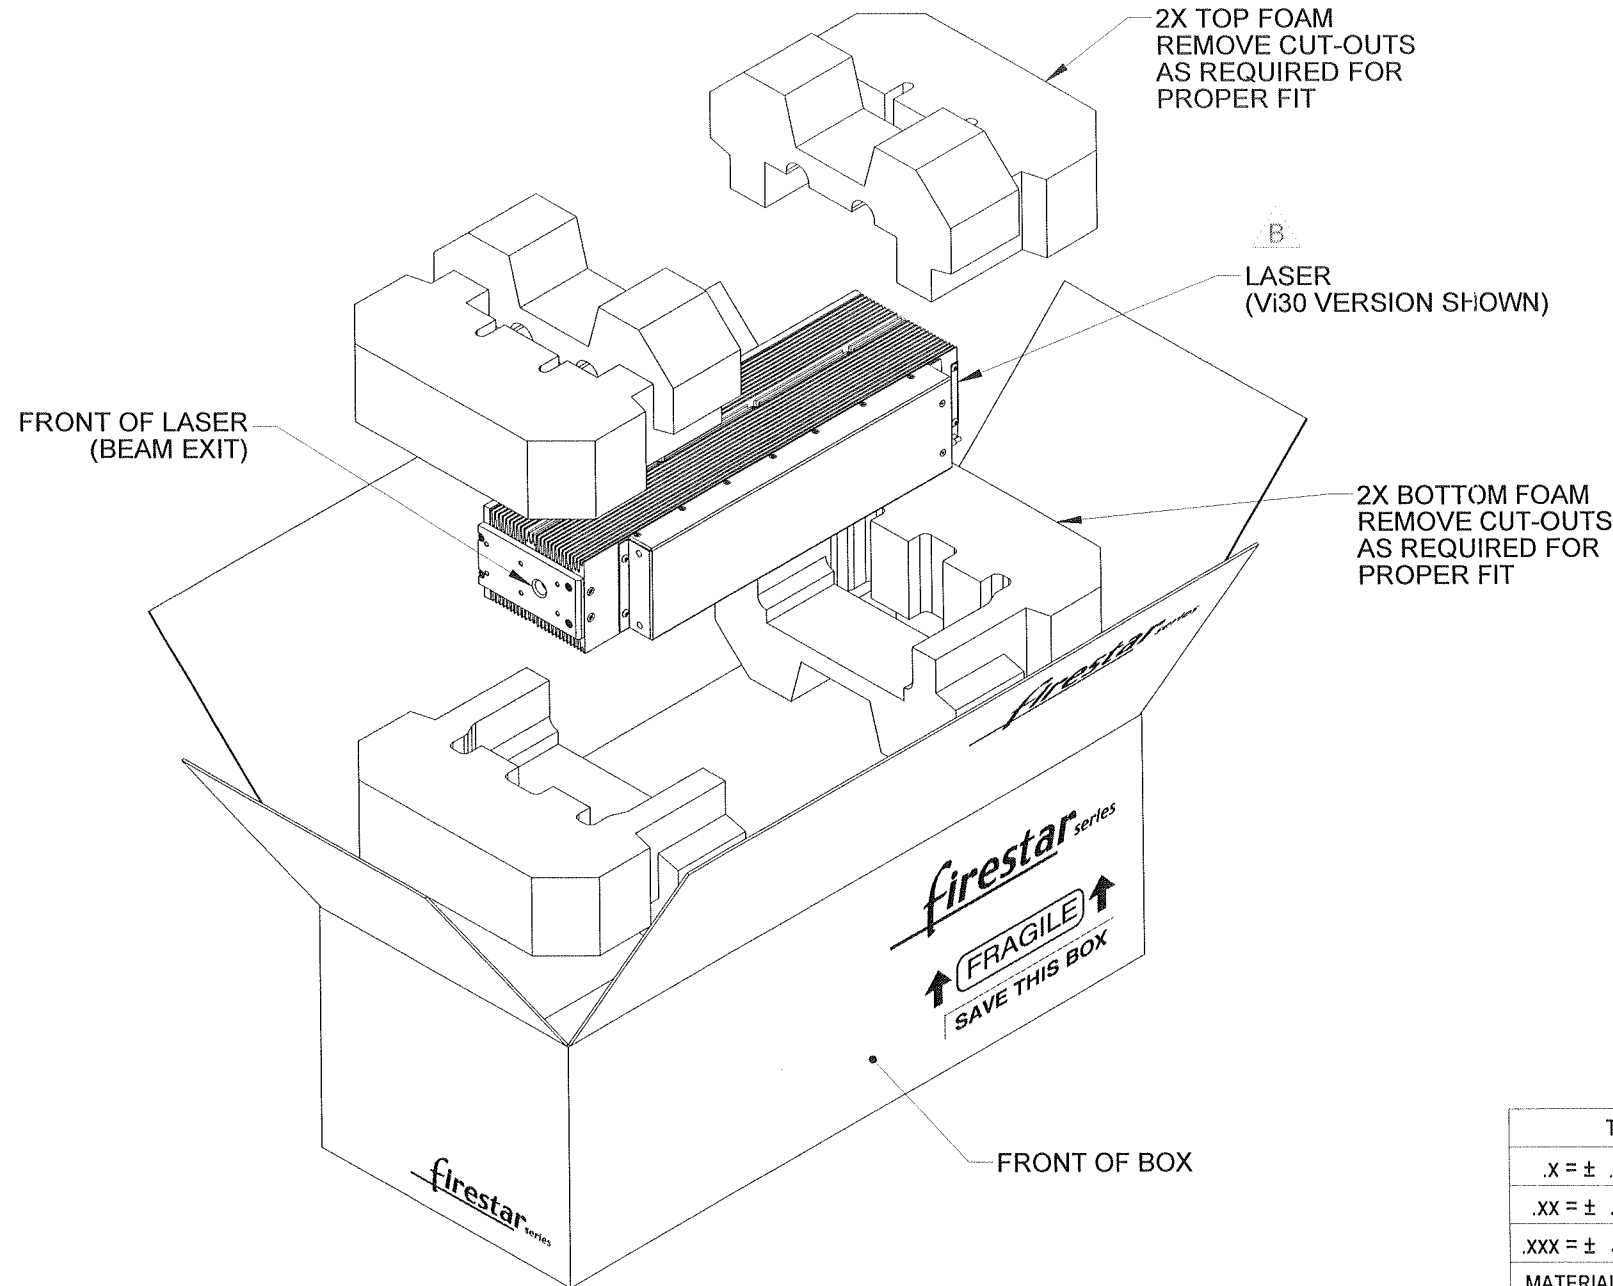

IMPORTANT NOTE: FAILURE TO PORPERLY PACKAGE LASER USING SYNRAD SHIPPING BOX AND FOAM/CARDBOARD INSERTS AS SHOWN MAY VOID WARRANTY. CUSTOMERS MAY INCUR ADDITIONAL REPAIR CHARGES DUE TO SHIPPING DAMAGE CAUSED BY IMPROPER PACKAGING.

TOLERANCES UNLESS NOTED:		PROPRIETARY THIS DRAWING IS PROPRIETARY TO SYNRAD INC. AND SHALL NOT BE USED OR DISCLOSED IN WHOLE OR IN PART WITHOUT WRITTEN PERMISSION OF SYNRAD INC.		SYNRAD INC. 4600 Campus Place Mukilteo, WA 98275 Phone: (425)349-3500 Fax: (425)349-3667	
.X = ± .	ANGLE = ± . °	DESCRIPTION: PACKAGING, V30/Vi30			
.XX = ± .					
.XXX = ± .					
MATERIAL: SEE BOM		PART NUMBER: 900-20277-01 DWG/FILE NUMBER: 900-20277-01			
FINISH:		SHEET 1 of 1	ENG: .	DRAWN BY: D. DUVALL	DATE: 26-Apr-11
		UNITS: Inches	CATEGORY: I	CHECKED BY:	DATE: 5/24/2012
		SIZE: B	FINISH CLASS: .	APPROVED BY:	DATE: 7/1/12